

Using ATS 2-Finger Geometry Biometric Terminals

1

Rest fingers gently against the surface of the finger reader plate.

Keep fingers in contact with plate as shown to the right. Raising fingers forward or backward, or curving the fingers, will result in a 'bad' biometric read.




Correct



Not Correct

2

Use the finger guide system to ensure proper finger placement

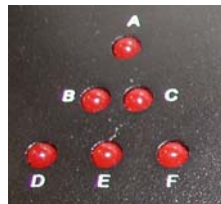

2a

These 3 lights will assist you in ensuring proper finger positioning.

2b


Gently slide your fingers forward until you feel the first peg on the webbing between your two fingers.

The bottom light will turn off.

2c

Squeeze the second peg gently.

The top two lights will turn off.

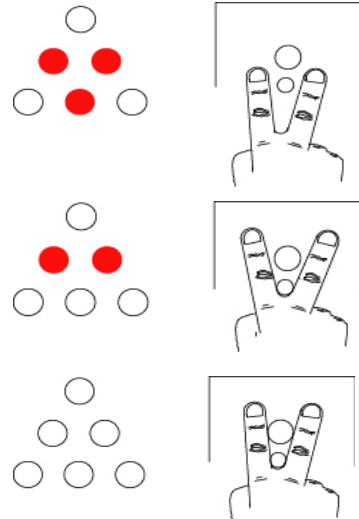

**Your fingers are now properly positioned!
Let the ATS 2-Finger Biometric Terminal do the rest!**